

ElectraLift™ Operation Instructions

Operation of the Control Panel:

The Control Panel (CP) is used to operate the system. The CP is divided into parallel and memory drives. The two arrow buttons are used for parallel drive and the last four buttons are for memory drive.

↑ Table Surface Drive UP


↓ Table Surface Drive DOWN

S Store Memory

U User Select Button

1 Memory 1

2 Memory 2

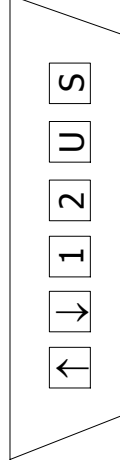

Control Panel

Table Surface Drive (↑↓):

The arrow buttons start the drive. The function is only activated when holding the button down.

Programming the System:

- 1.) Move the table surface to the height you desire by pressing either the up or down arrow button.
- 2.) Press U then 1 (for user number 1) then press S then 1 (to save first height selection.)
- 3.) For a second position setting just repeat the first step, then press S, then 2 (for second position setting).

Repeat this procedure for a second user by repeating step 1. Then press U then 2 (for user number 2) followed by step 3.

Selecting User Positions:

- 1.) Press the U button.
- 2.) Within two seconds, press either 1 or 2 designating user 1 or 2.
- 3.) Now press and hold either 1 or 2 designating position 1 or 2. Continue to hold the button until the table stops moving.