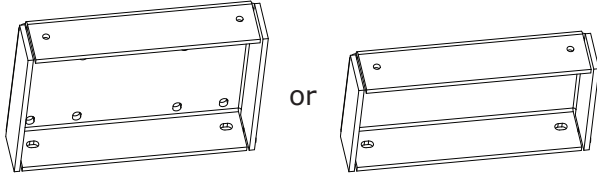



List of Parts, grouped by carton

<p>A 5" or 3" Spacer Qty: 2</p> 	<p>B #12 × 3/4" Pan Head Sheet Metal Screws Qty: 8 or #10-24 × 3/8" Pan Head Type 23 for Silhouette Top Qty: 8</p>	<p>C M6 × 12mm Button Cap Screws Qty: 4</p>	<p>From Table Assembly</p> <p>D M6 × 12mm Button Cap Screws included with table assembly Qty: 4</p>
--	---	--	--

1 Parts and Tool Verification

a Check your carton against the list above to verify that you have all the parts needed.


You will also need the following tools:

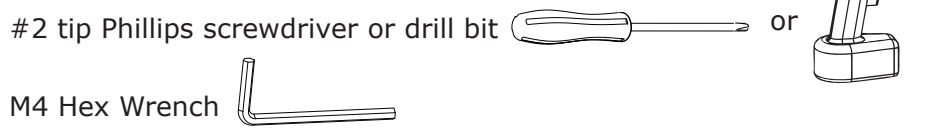

2 Attaching Spacer & Support Angle For Two Leg Tables:

a Attach the Spacer to the Leg Motor with the #M6 × 12mm Button Cap Screws from the table assembly.

b Attach the HX Support Angle to the Spacer with the M6 × 12mm Button Cap Screws on the left and right.


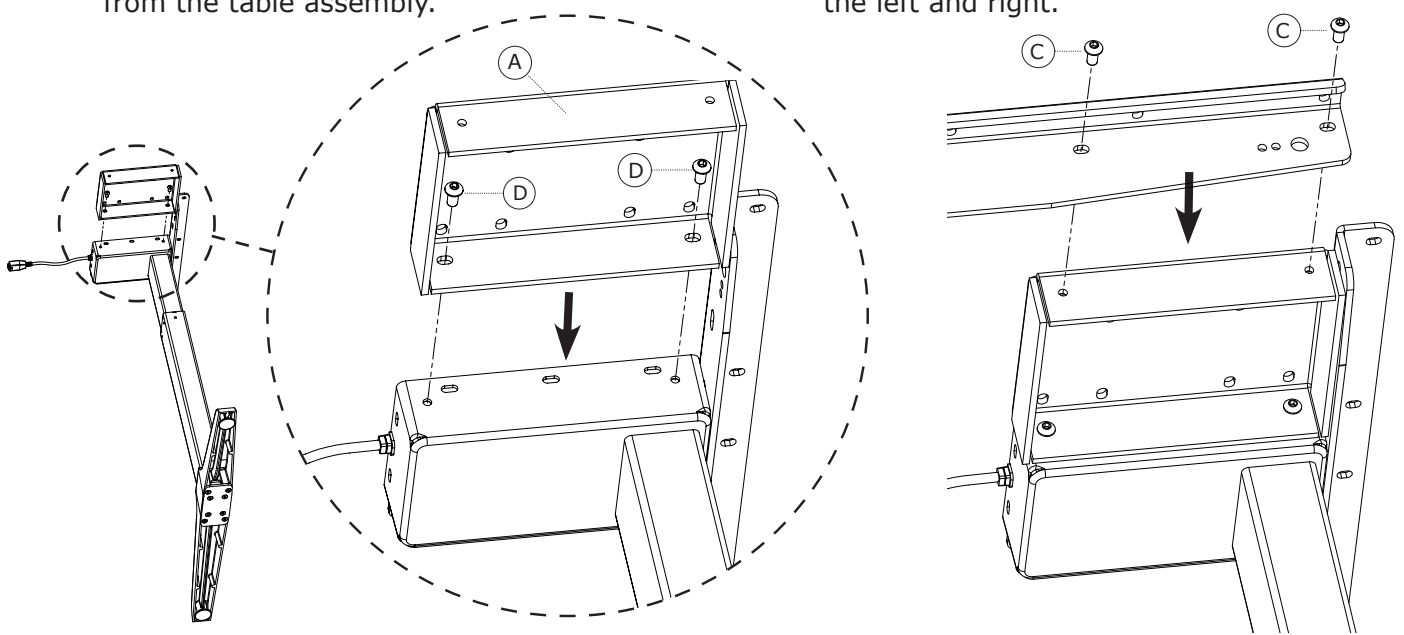


2 Attaching Spacer & Support Angle For *Three* Leg Tables:

- a Follow the two leg table instructions for both end legs. Center leg does not require spacers. Each HX Support Angle is attached to only one end leg spacer.

3 Attach Leg Assemblies with Support Angles to table top

- a Refer back to the Table Assembly Instructions to attach Leg Assemblies to the table top with the HX Support Angles.

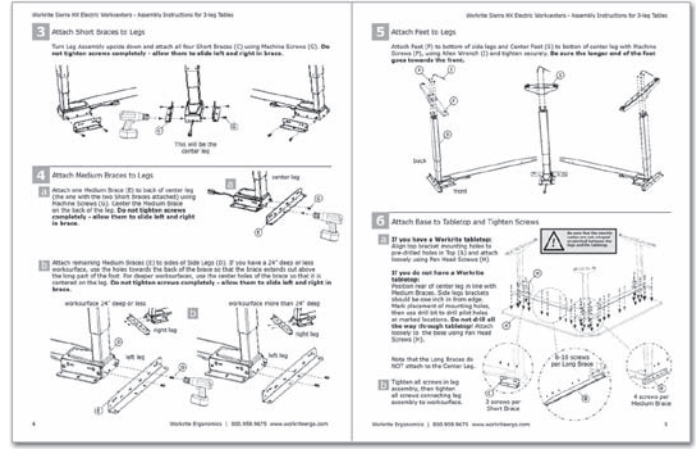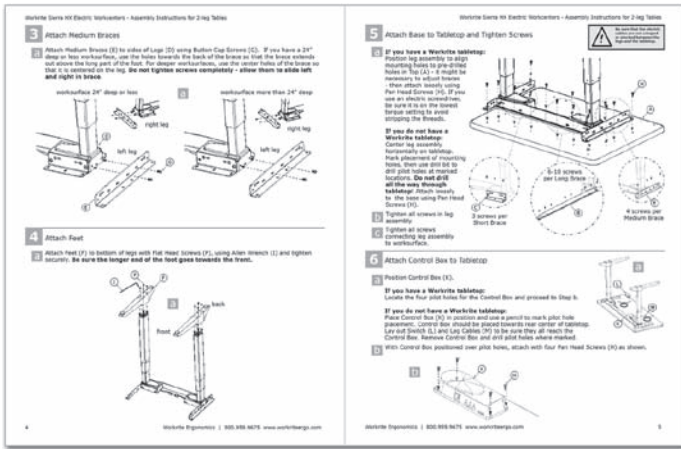

For two leg tables, these are instructions 1500165 steps **2** and **3**.

For three leg tables, these are instructions 1500166 steps **2**, **3** and **4**.

4 Secure 5" Spacer to table top. 3" Spacers do not attach to table top.

- a Attach the 5" Spacer to the table top *after* attaching the leg assemblies to the table top.

For two leg tables, this is after instructions 1500165 step **5**.

For three leg tables, this is after instructions 1500166 step **6**.

