

TOOL BAR AND PRIVACY SCREEN
INSTALLATION INSTRUCTIONS



TOOLS USED:

1/8" DRILL BIT

3/4" SPADE BIT

STANTION MOUNTING HARDWARE:

2 STANTION TUBES, 2 "C" CLAMPS, 2 BOLTS

BOLTS
"C" CLAMPS



STANTION TUBES

"C" CLAMPS CAN BE USED FOR
WORK SURFACES NOT DRILLED
THROUGH. SIMPLY TIGHTEN ON
BY TWISTING STANTION TUBE.



A MORE PERMANENT AND STABLE INSTALLATION OF YOUR
TOOL BAR OR PRIVACY SCREEN CAN BE COMPLETED BY
DRILLING THROUGH THE PRE-LOCATED BOLT HOLE
RECESSES.

USE THE 1/8" DRILL TO PILOT A HOLE FROM
BENEATH THE WORK SURFACE AT THE PRE-
LOCATED HOLE CENTERS. THIS WILL AVOID
DELAMINATING THE DECORATIVE SURFACE.

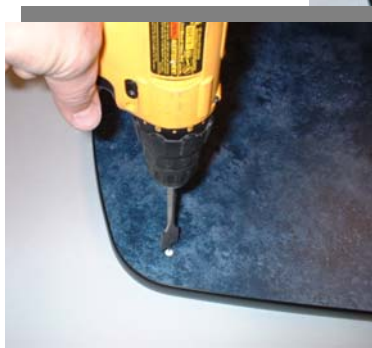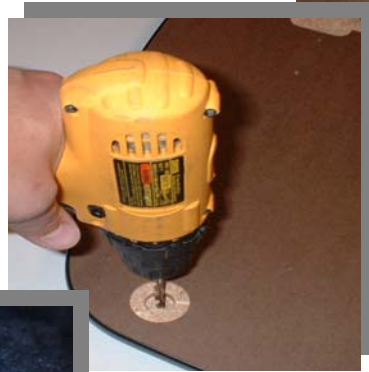

USING YOUR PILOT HOLE AS A GUIDE,
DRILL A HOLE WITH YOUR 3/4" SPADE
BIT FROM THE DECORATIVE SIDE OF
THE WORK SURFACE.




AFTER YOU HAVE DRILLED THROUGH THE WORK SURFACE, YOU WILL NOW BE ABLE TO INSERT THE BOLT FROM UNDERNEATH.



NOW SCREW THE STANTION TUBE ONTO THE BOLT BY TURNING THE TUBE WITH ONE HAND AND HOLDING THE BOLT WITH THE OTHER HAND.



THEN SLIDE YOUR TOOL BAR OR PRIVACY PANEL RECEPTICLE ONTO THE STANTION TUBE.

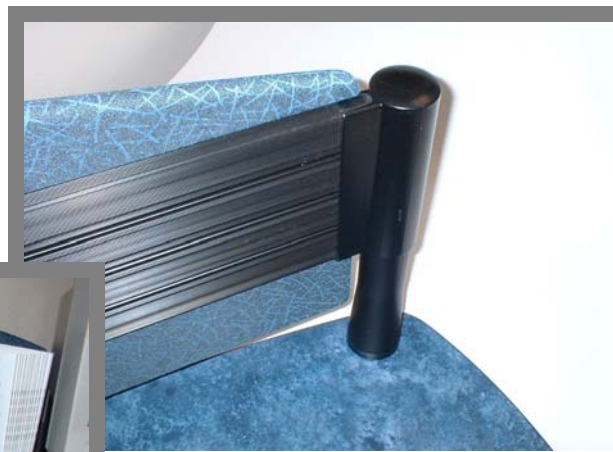

NOW YOU CAN ACCESSORIZE WITH ANY OF THE TOOL BAR OPTIONS.