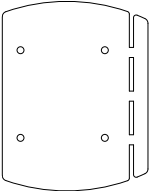









# Assembly Instructions for Workrite Poise™ and SwingArm™ Panel System Mount


## Parts

|   |  |  |   |
|---|--|--|---|
| <p><b>A</b> Panel Mounting Bracket<br/>Qty: 1</p>  | <p><b>B</b> Panel Mounting Hook<br/>Qty: 1 each</p>  <p>Left side mounting</p>  <p>Right side mounting</p> | <p><b>C</b> 10-32 x .75" Phillips-head screw<br/>Qty: 2</p>  <p><b>D</b> 10-32 x .5" Phillips-head screw<br/>Qty: 2</p>  | <p><b>E</b> Wall Mount<br/>Qty: 1</p>  <p>If converting from desktop unit, order SAWALL separately</p> <p><b>F</b> M5 x 10mm Phillips-head Screws<br/>Qty: 4</p>  |
|---|--|--|---|

Verify that you have all the hardware needed for the assembly.



Phillips-head screwdriver

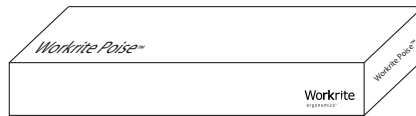

Workrite Poise or SwingArm  
(sold separately)

**!** **Note! Please read this if you are remounting a previously installed Workrite Poise or SwingArm.**

To change an existing desk or wall-mounted Workrite Poise or SwingArm installation into one that connects to the Sierra Tool Bar, you must first remove the Workrite Poise or SwingArm from its current mount:

Loosen set screw in back of base near top of current desk mount.



Remove plastic cap from top of Arm Assembly by popping it off.

Loosen screw holding arm to mount with an M5 Allen Wrench. Carefully remove monitor and arm from existing mount. Set aside in safe location until Tool Bar Mount assembly is complete.

## 1 Attach Wall Mount to Panel Mounting Bracket


Determine if mounting on left or right of vertical panel seam.

- a** Attach Wall Mount to Panel Mounting Bracket with four screws provided, using a Phillips-head screwdriver (not included). Discard cushion that comes with Wall Mount.

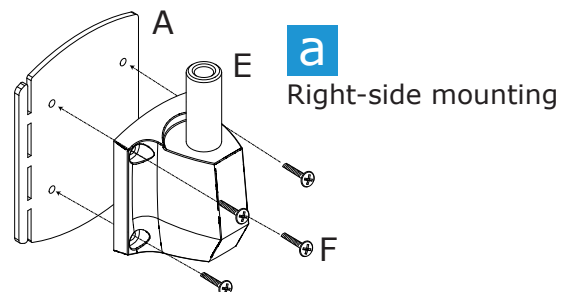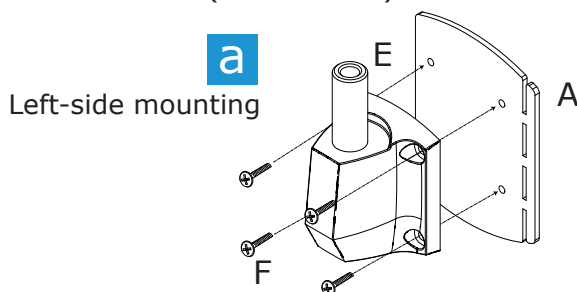

## 2 Attach Panel Mounting Hook to Mount

- a** Slide teeth of appropriate Mounting Hook (left or right) all the way through holes in Mounting Bracket.
- b** Tip Mounting Hook and insert teeth into panel system slots, push down for secure connection.
- c** Insert and tighten screws connected to Mounting Hook to eliminate movement of Workrite Poise or SwingArm Mount.

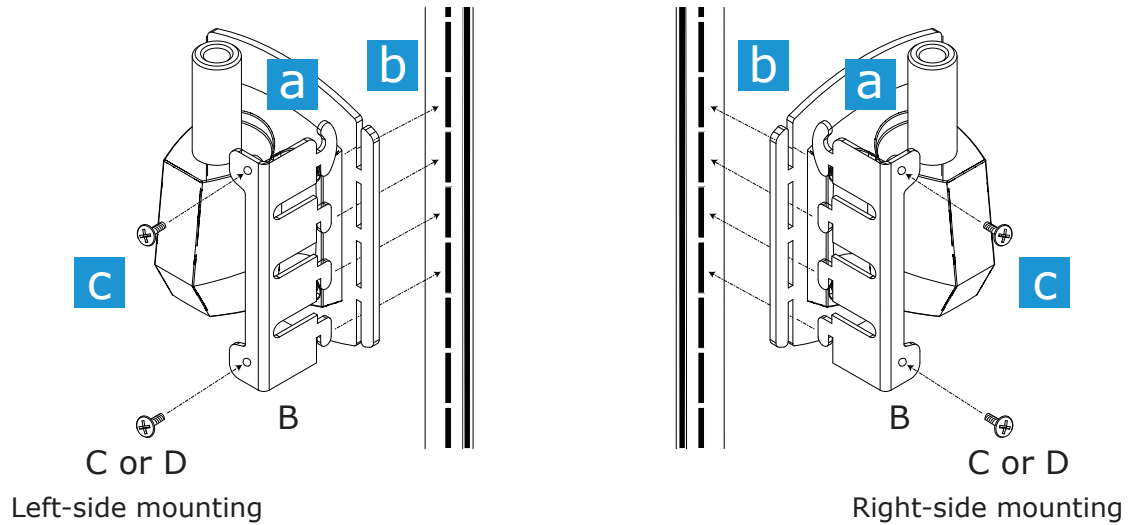

**Mount must have secure fit. Use longer #10 screws if they will fit without sticking out. Otherwise, use shorter screws.**

## 3 Attach Arm

- a** Attach assembled Workrite Poise or SwingArm and monitor to Mount and secure with Allen wrench provided with Workrite Poise or SwingArm. Please refer to the assembly instructions that came with your Workrite Poise or SwingArm for information on attaching and adjusting your monitor and cables.
- b** Tighten set screw inside Mount using M2.5 Allen wrench from Workrite Poise or SwingArm package, then attach sticker included in Wall Mount package.

