



4 CONTINUED

Classic Reversible Keyboard Platforms

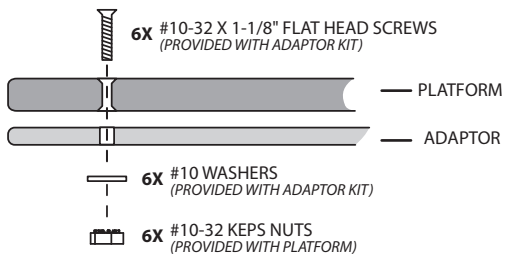


Ultra-Thin Keyboard Platforms

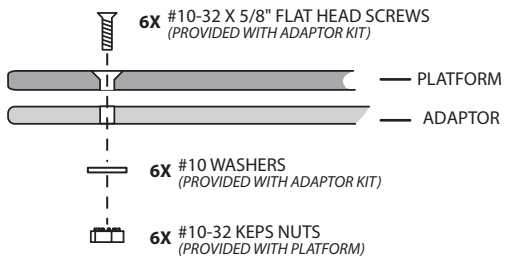

CONTINUED



Gemini Arm Platform Adaptor

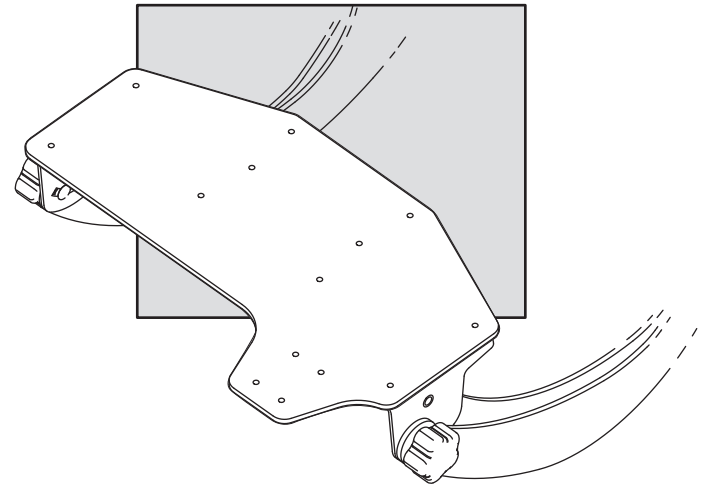

INSTALLATION INSTRUCTIONS


Model# UB-04933 Fits 2420-20/2440-20
 Model# UB-04985 Fits 2420-23/2440-23
 Model# UB-04986 Fits 2420-27/2440-27

WorkRite Ergonomics
 1450 Technology Lane
 Petaluma, CA 94954
 ph: 800.959.9675
 fx: 800.930.8989
 www.workriteergo.com

© 2004 WorkRite Ergonomics, Inc. All Rights Reserved

#1500080


CONTENTS

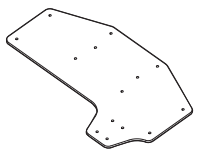

Platform Adaptor

- 10X #10-32 X 5/8" Phillips Flat Head Screws
- 6X #10-32 Keps Nuts
- 6X #10-32 X 1-1/8" Phillips Flat Head Screws
- 12X #10 Washers


1

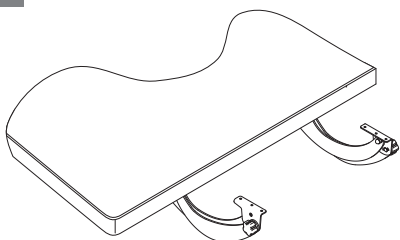

Install Gemini Arm

Install the Gemini Arm to your workstation as shown in the Gemini Arm Installation Instructions.


2

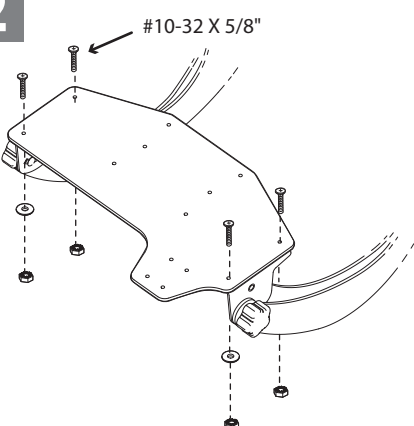

Attach the Platform Adaptor

Attach the Platform Adaptor with four #10-32 X 5/8" Phillips flat head screws, #10 washers and #10-32 keps nuts.


3

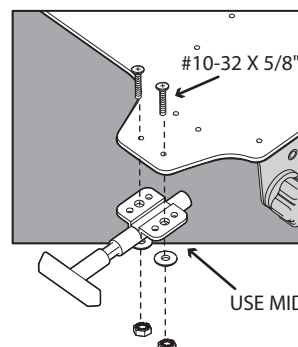

Attach the T-Pull

Attach the T-Pull with two #10-32 X 5/8" Phillips flat head screws, #10 washers, and #10-32 keps nuts.

(See diagram for pull location to match your platform depth)

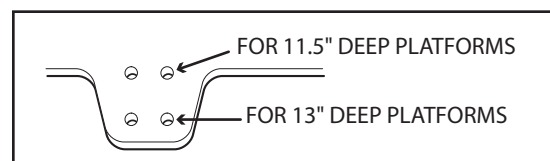


4


Attach Your Keyboard Platform

See the following diagrams to attach your WorkRite keyboard platform to the Gemini Arm Platform Adaptor.

180S / 2180S / 2180SN Keyboard Platforms

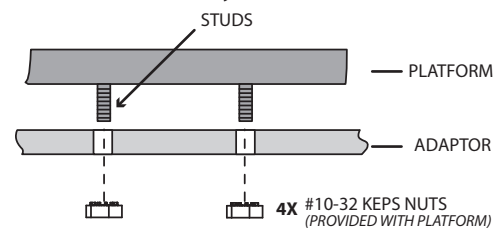

Classic Keyboard Platforms With Insert

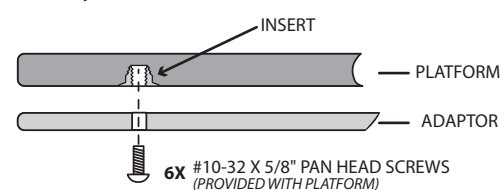

CONTINUED